


INSTALLATION GUIDE YAMAHA SIDEWINDER



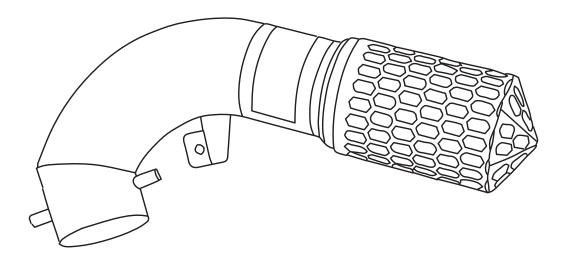


BEFORE YOU BEGIN

This is an installation guide for the Maptun Powersports Cold Air Intake for Yamaha Sidewinder.

You'll the following tools:


- Phillips Screwdriver
- 10mm hex socket or spanner
- Scissor or knife (to cut rubber hose)

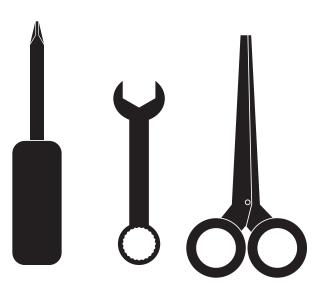


Remove left side planel.




Remove air filter box according to manufacturers instructions, remove the screw on the clutch protector plate.

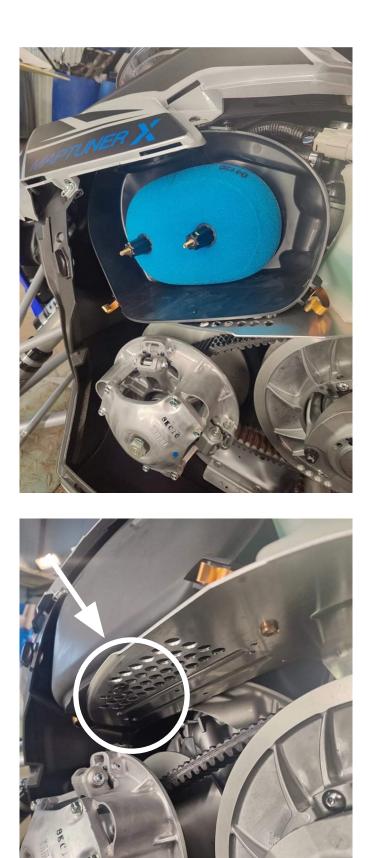


Install the aluminium ring in the plastic intake pipe and attach the silicone hose over it, fasten the hose with the included clamp.

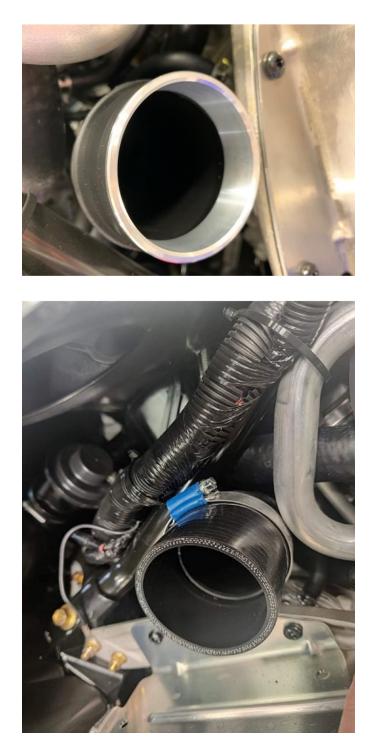

Install the included rubber mount on the clutch protector plate and fasten with one of the two included nuts from underneath.

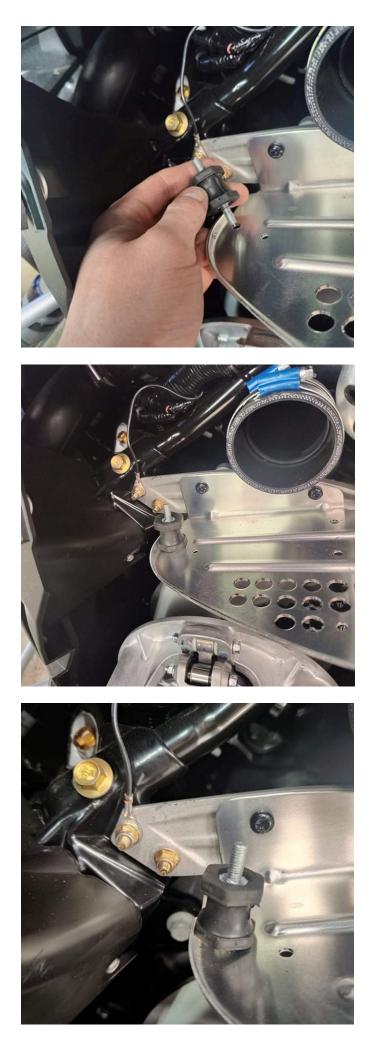

Attach the other clamp over the silicone and mount the CAI pipe in the hose, do not tighten the hose until the pipe is correctly adjusted. Install the pipe so that the lower mount fits on the installed rubber mount on the clutch protector plate. Fasten the CAI pipe with the other nut on the rubber mount and tighten the clamp on silicone hose.

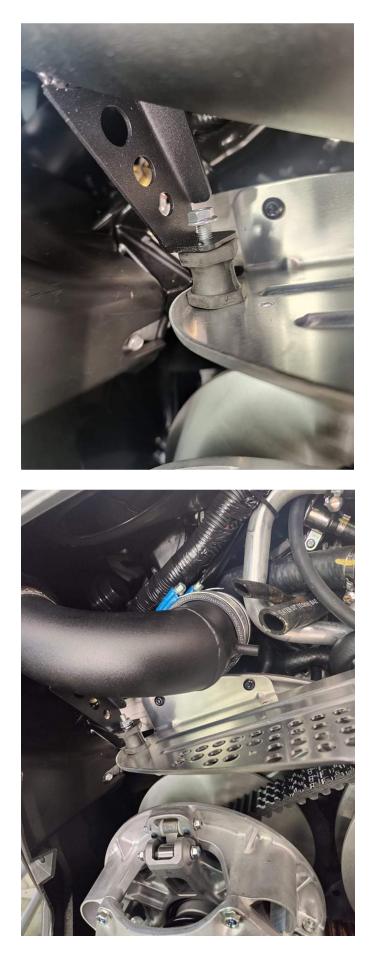

A For MY2017-2019

Attach the crank case ventilation hoses on the CAI pipe connections right before the silicone hose.




B For MY2020 and newer USE INSTALLATION KIT (005-8041-EX).

Locate the crank case ventilation hose from the air filter box and shorten it according to pictures..






Locate a connection on the plastic intake pipe covered by silicone hat, remove the hat.

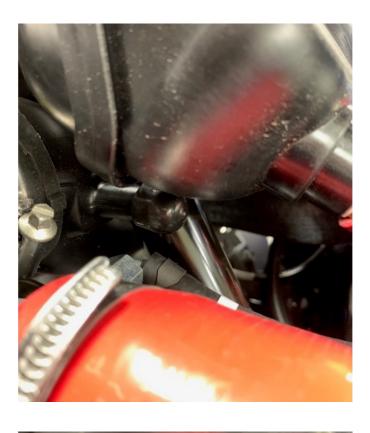



Install the straight connector in the shortened hose and connect the longer hose to the connector on the plastic intake pipe.

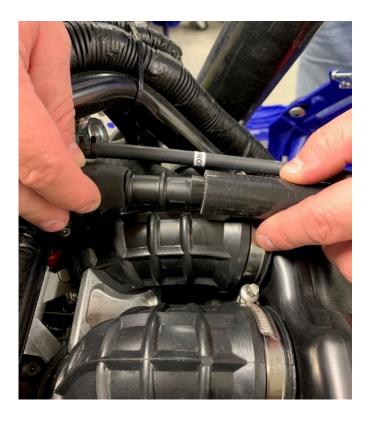



FINISHED

Photo shows the Cold Air Intake installed and ready on a 2020 Yamaha Sidewinder.



If you have any questions, contact us: info@maptun.com



MAPTUN PERFORMANCE AB

✓ +46 19 23 70 30
➢ INFO@MAPTUN.COM

WWW.MAPTUN.COM