

Instructions installing MapTun Shortshift Saab 9-3 6-speed




Remove panel surrounding gear lever.






Remove panels on both sides.



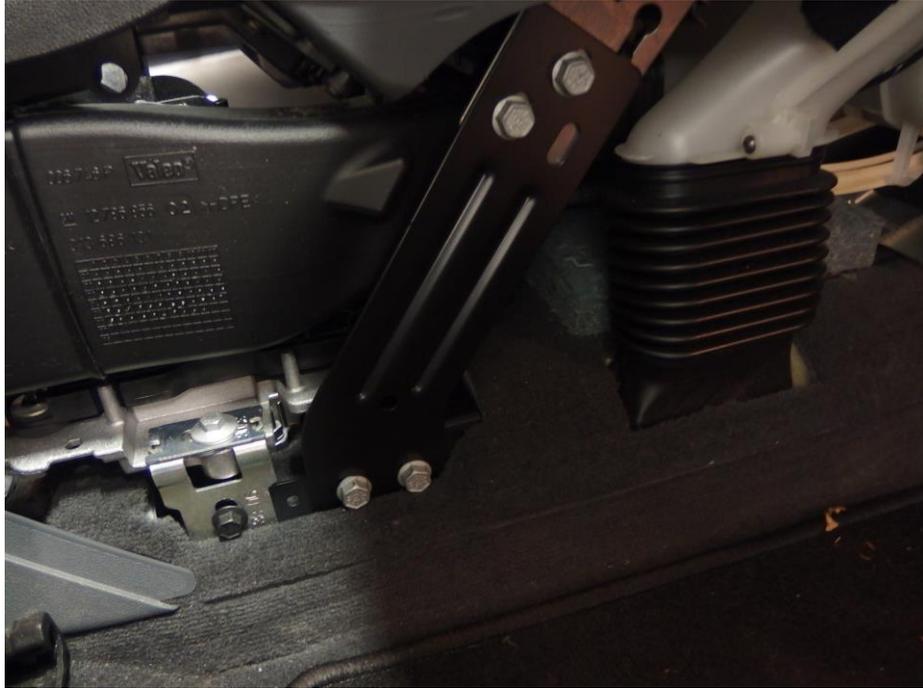

Remove these struts on both sides.



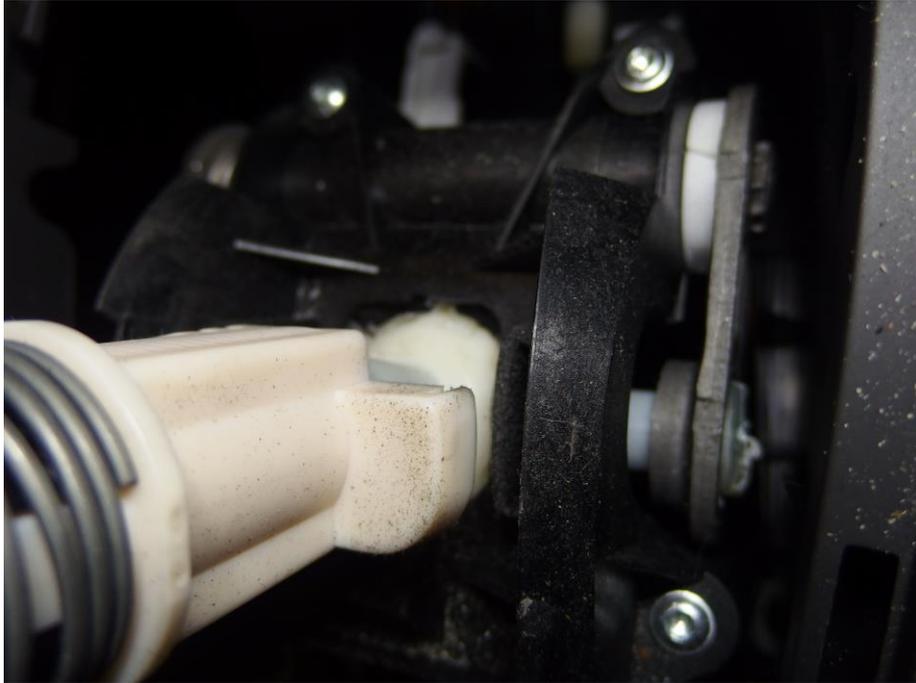

Remove 4 screws holding gear lever in position.





Use a screwdriver to remove lower shaft from the joint.



Cut the lower part of the gear shaft.




Mount the following vertical joint.



You need to cut the plastic to make the lever move correctly.



Remove AC tunnel for easy access.

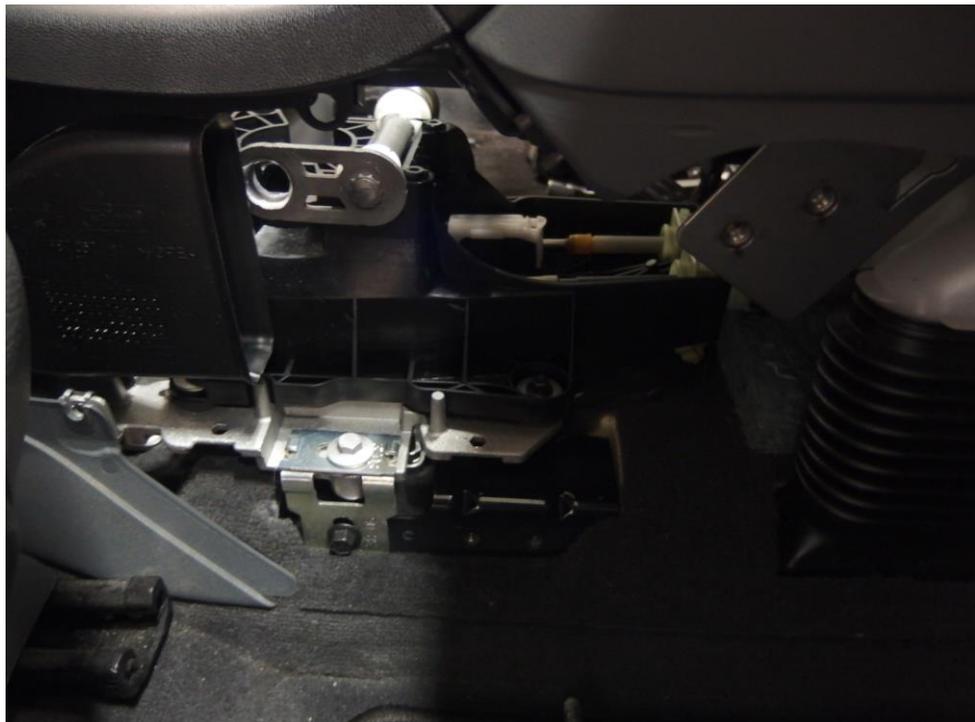

Remove four screws holding gear lever in place.



Place bushings between and use standard screw and spacer.

